



Printing



Click this icon to print the document on the screen in the number or copies desired. The default print value is 1, 1 copy or one sheet will be printed. Be careful when printing business cards. Since the document will be printed on a strip 30 cm long, there are a number of exposures, you automatically have one or more extra copies.

Print options

Before printing, don't forget to select your paper type according to your job : **bristol**, **coated**, **mat**, **special**, etc.


Careful, use paper that is recommended for your Master Carte Color.

Selecting the feed mode

Before printing, don't forget to select the loading mode. You can print from the paper loader with a capacity of 2,000 Sheets, or using the roller.

Printing with Master Carte Color

Print Option window

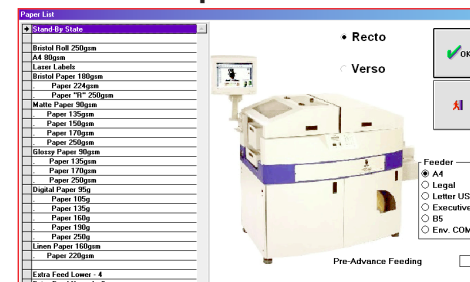

Loader Print Window



Roller Print Window



Rubber banding

Adjustement

During a laser unit replacement, the "rubber banding" of the printouts may be changed. This Master Color version allows adjusting the rubber banding of the printing printing from the paper selection screen.

This adjustment is added to the initial setting determined during the machine "run-in" period. It allows rubber banding or compressing the printing homogeneously over the entire paper length. The identification point to be measured is located 27 cm from the top of page.

Etirement de l'impression

27 cm = ==> %

To adjust this rubber banding, select the "Rubber Banding of Printouts" option in the Master Color menu.

If you have a document on the screen, Master Color will prompt you to find out if you want to save it because the software will automatically select an A4 white paper sheet.



Quick Start

Text

Drawing objects

Graduated shading

Importing images

Printing

Tips

Problems

Auto Numbering

Mouse Actions

related software

Rubber banding

Printing

This A4 sheet is automatically gridded.


Print the sheet and then measure the line distance 27 cm from the top edge of the sheet.

If the rubber banding adjustments are no longer correct subsequent to a laser unit replacement an intervention on the belt, or for any other reason, this fault may now be remedied.

a) If the line is effectively located at 27 cm, this means that the rubber banding is correct. Enter 27.00 in the paper selection screen.

b) If the line is located more than 27 cm (for example, at 27.2 cm), this indicates printing rubber banding. Enter the read value : 27.20 ; the Master Color software will automatically carry out the rubber banding correction during the next print job to reset the line effectively at 27 cm.

c) If the line is located less than 27 cm (for example, at 26.75 cm), this indicates printing compression. Enter the read value ; the Master Color software will automatically correct for rubber banding during the next print job.

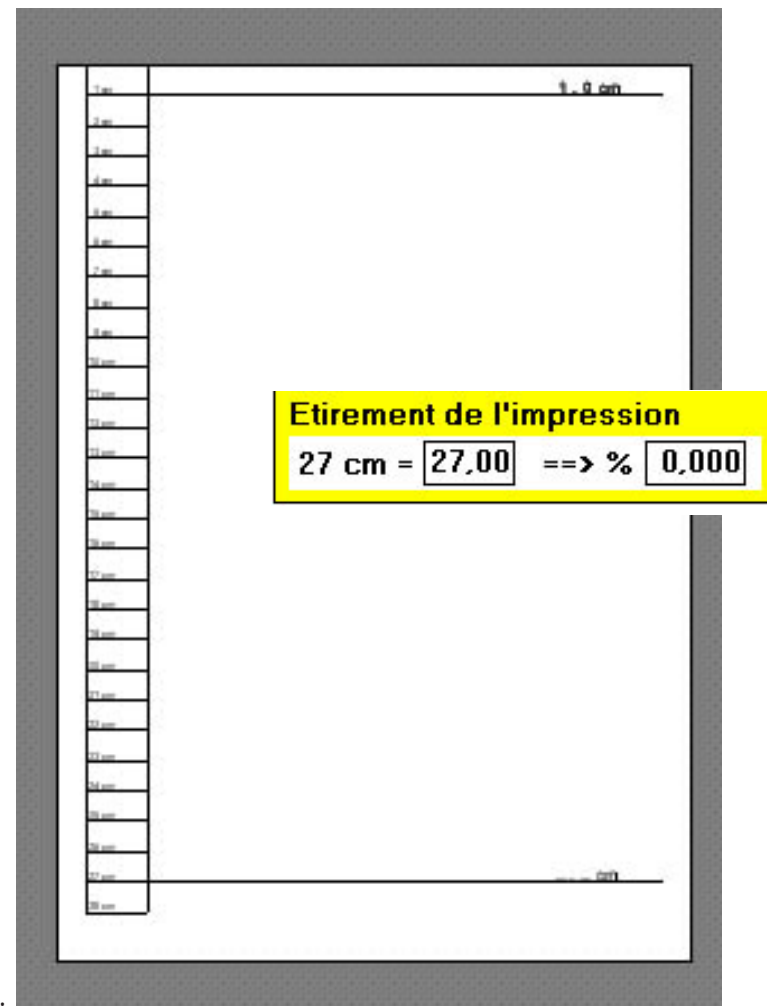

The entered value is stored and will remain activated for all the printouts.


Do NOT forget to modify it if the rubber banding changes.

Printing with Master Carte Color

Printing

Requires the EPROM version MC 102.

A new yellow colored floating window appears on the righthand side of the screen. This window indicates to you the number of printed pages.

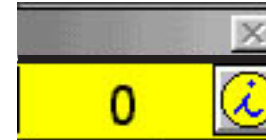


A button allows you to access a counter setting window.

- The total number of pages printed by the Master Carte Color displays on the bottom of the window.

This counter is not modifiable.

- The number of paper cuts by the upper transversal slitter is also displayed.

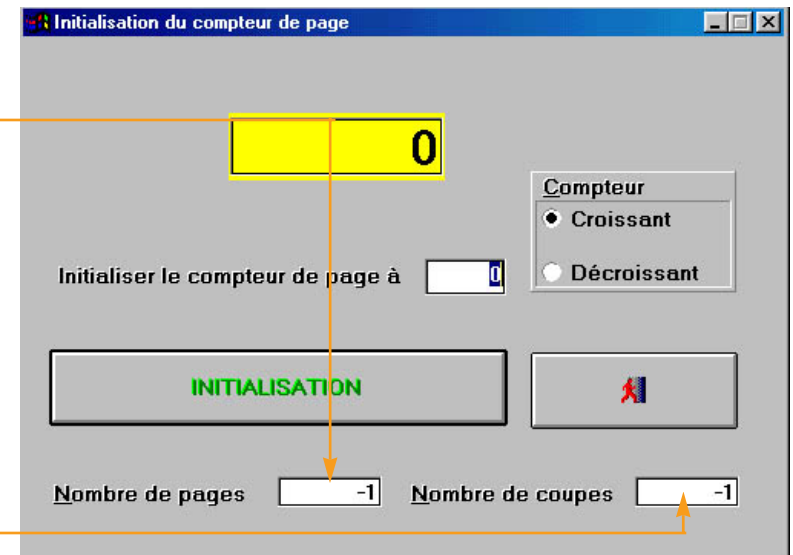

Quick Start

Text

Drawing objects

Graduated shading

Importing images

Printing

Tips

Problems

Auto Numbering

Mouse Actions

related software